

Fendt Europe Agricultural equipment epc spare parts catalog model list

FORAGE

Harvesters

KATANA 65 650/01001-00000

KATANA 85 653/00101-99999

Header Attachments

PICK UP P3000

PICK UP P3001

ROTARY CROP HEADER 360PLUS

ROTARY CROP HEADER 375PLUS

ROTARY CROP HEADER 390PLUS

ROTARY CROP HEADER 460PLUS

HARVESTING

Combines - Conventional

5180 COMBINE - 3906256

5180 C COMBINE -1637438

5220/5250 COMBINES - 1637410

5220E COMBINE (|-> 2012)-3906388

5220E COMBINE - 3906035

5250 CEREAL COMBINE - 1637477

5250E COMBINE - 3906036

5250L COMBINE - 3906253

5255 L / 5255 L MCS COMBINES- 3906389

5270 C COMBINE - 3906038

5275 C COMBINE - 3906391

5275 C PL COMBINE - 3906392

5275 C PL / C PLI COMBINES -->554000079-3906472

6250 E / L COMBINE - 3906037

6270L COMBINE - 3906254

6275 L / 6275 L MCS COMBINES- 3906390

6280 COMBINE -1637488

6300/6330 COMBINES-1637412

6300 C COMBINE - 3906473

6335 C COMBINE - 3906393

6335 C COMBINE - 3906393

6335 C PL COMBINE - 3906474

6335 C PL COMBINE - 3906394

8300/8350 COMBINES - |-> 61122 - 3906022

8300 / 8350 COMBINES ->| 60521 -1637414

8370P / 8400P COMBINES- 3906262

8370P / 8400P GEN II COMBINES- 6246072

9470X / 9470X AL COMBINES - 3906268

9490X / 9490X AL HYBRID GEN II COMBINES - 6246078

Combines - Rotary

9300 R COMBINE

9350 R MAHDRESCHER

9350R COMBINE

9390R COMBINE (2012-2014) (CHC26101 - EHC26500)

9460 R MAHDRE3CHER | => S/N HUC8E101

9460R COMBINE (EFF S/N HUC8E101)

9480 R COMBINE

Grain Headers/Attachments

POWER FLOW TABLES WWHU 18,20,22,25,30

(5270C/6300C/8300/8350/8370P/8400P/9300R/9350R/9460R/9470X COMBINES) - 3906122

TABLES "FF" FENDT COMBINES (5255 - 5270C - 5275 - 6275 - 6300C - 6335) - 3906288

TABLES "L" FENDT COMBINES (5180E - 5220E - 5250 - 5270C - 6250E - 6270L - 6300C) - 3906028

HAY EQUIPMENT

Balers - Big Square

12130 / 12130S BALER - MEDIUM SQUARE - 3906198

12130 LARGE RECTANGULAR BALER

1270 / 1270 S MEDIUM SQUARE BALER - |-> HT85101 - 3906244

1270 / 1270 S MEDIUM SQUARE BALERS - ->| HT85100 -1637499

1270 N / 1270 S MEDIUM SQUARE BALERS (EHB02101 - 99999)

1290 / 1290 S MEDIUM SQUARE BALER - |-> HS 74101 - 3906199

1290 / 1290 S MEDIUM SQUARE BALERS - ->| HS 74100 -1637492

1290N / 1290S LARGE RECTANGULAR BALER

870 LARGE RECTANGULAR BALER

870 N / S MEDIUM SQUARE BALER - 3906283

990 SQUARE BALER - —>| HT 73100 - 3906011

990 / 990 S MEDIUM SQUARE BALER - |-> HT 73101 - 3906202

990N / 990S / 990R LARGE RECTANGULAR BALER (EHB03101 - 99999)

990N / 990S LARGE RECTANGULAR BALERS

MATERIAL HANDLING

Mounted Loaders

455 / 555 / 655 / 755 / 855 LOADERS - 3906161

685 / 785 / 885 L.C.S LOADERS - 3906372

TRACTORS

Agricultural - Wheeled

Fendt FARMER 102 135/04601 -99999 - F135001

Fendt FARMER 103 138/11401 -99999 - F138001

Fendt FARMER 104 238/20701 -99999 - F238001

Fendt FARMER 105 258/10601 -99999 - F258001

Fendt FARMER 108 278/00001 -99999 - F278001

Fendt FARMER 240S 294/00001 -99999 - F294000

Fendt FARMER 250S 295/00001 -99999 - F295000
Fendt FARMER 250V 205/00001 -99999 - F205000
Fendt FARMER 260P 246/00001 -99999 - F246000
Fendt FARMER 260S 296/00001 -99999 - F296000
Fendt FARMER 260V 206/00001 -99999 - F206000
Fendt FARMER 270P 247/00001 -99999 - F247000
Fendt FARMER 270V 207/00001 -99999 - F207000
Fendt FARMER 275S 297/00001 -07000 - F297000
Fendt FARMER 275V 208/00001 -07000 - F208000
Fendt FARMER 280P 248/00001 -99999 - F248000
Fendt FARMER 280S 297/07001 -99999 - F297001
Fendt FARMER 280V 208/07001 -99999 - F208001
Fendt FARMER 303 152/00001 -99999 - F152000
Fendt FARMER 304 158/00001 -03500 - F158000
Fendt FARMER 304 158/03501 -20000 - F1580001
Fendt FARMER 304 158/20001 -99999 - F1580002
Fendt FARMER 305 162/00001 -07500 - F162000
Fendt FARMER 305 162/07501 -20000 - F162001
Fendt FARMER 305 162/20001-99999 -F162002
Fendt FARMER 306 168/00001-11500 -F168000
Fendt FARMER 306 168/11501-13000 -F168001
Fendt FARMER 306 168/13001-99999 -F168002
Fendt FARMER 307 117/00101-00200 & 01001 -05000 - F117000
Fendt FARMER 307 117/00201-01000 & 05001 -99999-F117001
Fendt FARMER 307 170/00001-02000 -F170000
Fendt FARMER 307 170/02001-99999 -F170001
Fendt FARMER 307 175/00001-00800 -F175000
Fendt FARMER 307 175/00801-99999 -F175001
Fendt FARMER 307 307/00101-99999 - F307000
Fendt FARMER 308 118/00101-00200 & 01001 -05000 - F118000
Fendt FARMER 308 118/00201-01000 & 05001-99999 - F118001
Fendt FARMER 308 178/00001-12000-F178000

Fendt FARMER 308 178/12001-14100-F178001
Fendt FARMER 308 178/14101-30000 -F178002
Fendt FARMER 308 178/30001-99999 -F178003
Fendt FARMER 308 308/00101-99999 - F308000
Fendt FARMER 309 119/00101-00200 & 01001 -05000 - F118000
Fendt FARMER 309 119/00201-01000 & 05001 -88883 - F118001
Fendt FARMER 309 186/00001-11500 -F186000
Fendt FARMER 309 186/11501-14600 -F186001
Fendt FARMER 309 186/14601-30000 -F186002
Fendt FARMER 309 186/30001-99999 -F186003
Fendt FARMER 309 309/00101-99999 - F309000
Fendt FARMER 310 192/00001 -02000 - F192000
Fendt FARMER 310 192/02001 -03400 - F192001
Fendt FARMER 310 192/03401 -99999 - F192002
Fendt FARMER 310 310/00101 -99999 - F310000
Fendt FARMER 311 198/00001 -05000 - F198000
Fendt FARMER 311 198/05001 -07700 - F198001
Fendt FARMER 311 198/07701 -99999 - F193002
Fendt FARMER 311 311/00101 -99999 - F311000
Fendt FARMER 312 199/00001 -03500 - F199000
Fendt FARMER 312 199/03501 -99999 - F199001
Fendt FARMER 312 312/00101 -99999 - F312000
Fendt FARMER 409 409/00101 -99999 - F409000
Fendt FARMER 409NA 409/00101 -99999 - F409105
Fendt FARMER 410 410/00101 -99999 - F410000
Fendt FARMER 410NA 410/00101 -99999 - F410105
Fendt FARMER 411 411/00101 -99999 - F411000
Fendt FARMER 411NA 411 /00101 -99999 - F411105
Fendt FARMER 412 412/00101 -99999 - F412000
Fendt FARMER 412NA 412/00101 -99999 - F412105
Fendt FARMER 5S/106 268/00001 -99999 - F263000
Fendt FAVORIT 509 509/00101 -99999 - F509000

Fendt FAVORIT 510 510/00101 -99999 - F510000
Fendt FAVORIT 511 511 /00101 -99999 - F511000
Fendt FAVORIT 512 512/00101-99999 F512000
Fendt FAVORIT 514 514/00101-99999 F514000
Fendt FAVORIT 515 515/00101-99999 F515000
Fendt FAVORIT 600 280/00001-99999 F280000
Fendt FAVORIT 610 281/00001-99999 F281000
Fendt FAVORIT 611 282/00001-99999 F282000
Fendt FAVORIT 611 382/00001-99999 F382000
Fendt FAVORIT 612 283/00001-99999 F283000
Fendt FAVORIT 612 383/00001-99999 F383000
Fendt FAVORIT 614 284/00001-99999 F284000
Fendt FAVORIT 614 384/00001-99999 F384000
Fendt FAVORIT 615 285/00001-99999 F285000
Fendt FAVORIT 615 385/00001-99999 F385000
Fendt FAVORIT 711 711/00101 -00200 & 01001 -08000 - F711000
Fendt FAVORIT 712 712/00101 -00200 & 01001 -08000 - F712000
Fendt FAVORIT 712NA 712/00101 -00200 & 01001 -08000 - F712105
Fendt FAVORIT 714 714/00101 -00200 & 01001 -08000 - F714000
Fendt FAVORIT 714NA 714/00101 -00200 & 01001 -08000 - F714105
Fendt FAVORIT 716 716/00101 -00200 & 01001 -08000 - F716000
Fendt FAVORIT 716NA 716/00101 -00200 & 01001 -08000 - F716105
Fendt FAVORIT 816 816/00101-99999 -F816000
Fendt FAVORIT 818 818/00101-99999 -F818000
Fendt FAVORIT 822 822/00101-99999 -F822000
Fendt FAVORIT 824 824/00101 -99999 - F824000
Fendt FAVORIT 916 916/00101 -00400 & 01001 -03000 - F916000
Fendt FAVORIT 916 916/00401 -01000 & 03001 -06000 - F916001
Fendt FAVORIT 918NA 916/00101 -06000 - F916106
Fendt FAVORIT 920 920/00101 -00400 & 01001 -03000 - F320000
Fendt FAVORIT 920 920/00401 -01000 & 03001 -06000 - F320001
Fendt FAVORIT 920NA 920/00101 -00400 & 01001 -03000 - F920105

Fendt FAVORIT 920NA 920/03001 -06000 - F920106

Fendt FAVORIT 924 924/00101 -00400 & 01001 -03000 - F924000

Fendt FAVORIT 924 924/00401 -01000 & 03001 -06000 - F924001

Fendt FAVORIT 924NA 924/00101 -00400 & 01001 -03000 - F924105

Fendt FAVORIT 924NA 924/00401 -01000 & 03001 -06000 - F924106

Fendt FAVORIT 926 926/00101 -00400 & 01001 -03000 - F926000

Fendt FAVORIT 926 926/00401 -00700 & 03001 -06000 - F926001

Fendt FAVORIT 926NA 926/00101 -00400 & 01001 -03000 - F926105

Fendt FAVORIT 926NA 926/00401 -0000 & 03001 -06000 - F926106

Fendt FENDT 206S 326/00101 -99999 - F326000

Fendt FENDT 206V NA 210/00101 -99999 - F210105

Fendt FENDT 206V+F 210/00101 -99999 - F210000

Fendt FENDT 207 VARIO 330/00101 -99999 - F330000

Fendt FENDT 207S 327/00101 -99999 - F327000

Fendt FENDT 207V NA 212/00101 -99999 - F212105

Fendt FENDT 207V+F 212/00101 -99999 - F212000

Fendt FENDT 207V+F 260/00101 -99999 - F260000

Fendt FENDT 208 VARIO 331/00101 -99999 - F331000

Fendt FENDT 208P 221/00101 -99999 - F221000

Fendt FENDT 208P NA 221/00101 -99999 - F221105

Fendt FENDT 208S 328/00101 -99999 - F328000

Fendt FENDT 208V NA 213/00101 -99999 - F213105

Fendt FENDT 208V+F 213/00101 -99999 - F213000

Fendt FENDT 208V+F VARIO 261/00101 -99999 - F261000

Fendt FENDT 209 VARIO 332/00101 -99999 - F332000

Fendt FENDT 209P 222/00101 -99999 - F222000

Fendt FENDT 209P VARIO 272/00101 -99999 - F272000

Fendt FENDT 209P NA 222/00101 -99999 - F222105

Fendt FENDT 209S 329/00101 -99999 - F329000

Fendt FENDT 209V NA 214/00101 -99999 - F214105

Fendt FENDT 209V+F 214/00101 -99999 - F214000

Fendt FENDT 209V+F VARIO 262/00101 -99999 - F262000

Fendt FENDT 210 VARIO 333/00101 -99999 - F333000
Fendt FENDT 210P VARIO 273/00101 -99999 - F273000
Fendt FENDT 210V+F VARIO 263/00101 -99999 - F263000
Fendt FENDT 211 VARIO 334/00101 -99999 - F334000
Fendt FENDT 211P VARIO 274/00101 -99999 - F274000
Fendt FENDT 211V+F VARIO 264/00101 -99999 - F264000
Fendt FENDT 309 Vario SCR 322/00101 -99999 - F322000
Fendt FENDT 309 336/00101 -99999 - F336000
Fendt FENDT 310 Vario SCR 323/00101 -99999 - F323000
Fendt FENDT 310 337/00101 -99999 - F337000
Fendt FENDT 311 Vario SCR 324/00101 -99999 - F324000
Fendt FENDT 311 338/00101 -99999 - F338000
Fendt FENDT 312 Vario SCR 325/00101 -99999 - F325000
Fendt FENDT 312 339/00101 -99999 - F339000
Fendt FENDT 313 Vario SCR 340/00101 -99999 - F340000
Fendt FENDT 411 400/00101 -99999 - F400000
Fendt FENDT 412 401/00101 -99999 - F401000
Fendt FENDT 413 402/00101 -99999 - F402000
Fendt FENDT 414 403/00101 -99999 - F403000
Fendt FENDT 415 404/00101 -99999 - F404000
Fendt FENDT 512 Vario SCR 413/00101 -99999 - F413000
Fendt FENDT 513 Vario SCR 414/00101 -99999 - F414000
Fendt FENDT 514 Vario SCR 415/00101 -99999 - F415000
Fendt FENDT 516 Vario SCR 416/00101 -99999 - F416000
Fendt FENDT 711 711/00201 -00300 & 08001 -99999 - F711001
Fendt FENDT 712 712/00201 -00300 & 08001 -99999 - F712001
Fendt FENDT 712 724/00101 -99999 - F724000
Fendt FENDT 712NA 712/00201 -00300 & 08001 -99999 - F712106
Fendt FENDT 712NA 724/00101 -99999 - F724105
Fendt FENDT 714 714/00201 -03000 & 08001 -99999 - F714001
Fendt FENDT 714 725/00101-99999 -F725000
Fendt FENDT 714 SCR 732/00101-99999 -F732000

Fendt FENDT 714NA 714/00201 -00300 & 08001 -99999 - F714106
Fendt FENDT 714NA 725/00101-99999 F725105
Fendt FENDT 714NA S4 738/00101-99999
Fendt FENDT 714NA SCR 732/00101-99999 F732105
Fendt FENDT 716 716/00201 -003001 & 08001 -99999 - F716001
Fendt FENDT 716 726/00101-99999 -F726000
Fendt FENDT 716 S4 739/00101-99999
Fendt FENDT 716 SCR 733/00101-99999 -F733000
Fendt FENDT 716NA 716/00201 -00300 & 08001 -99999 - F716106
Fendt FENDT 716NA 726/00101-99999 F726105
Fendt FENDT 716NA S4 739/00101-99999
Fendt FENDT 716NA SCR 733/00101-99999 F733105
Fendt FENDT 718 727/00101-99999 -F727000
Fendt FENDT 718 S4 740/00101-99999
Fendt FENDT 718 SCR 734/00101-99999 -F734000
Fendt FENDT 718NA 727/00101-99999 F727105
Fendt FENDT 718NA S4 740/00101-99999
Fendt FENDT 718NA SCR 734/00101-99999 F734105
Fendt FENDT 720 S4 741/00101-99999
Fendt FENDT 720 SCR 735/00101-99999 F735000
Fendt FENDT 720NA S4 741/00101-99999
Fendt FENDT 720NA SCR 735/00101-99999 F735105
Fendt FENDT 722 S4 742/00101-99999
Fendt FENDT 722 SCR 736/00101-99999 F736000
Fendt FENDT 722NA S4 742/00101-99999
Fendt FENDT 722NA SCR 736/00101-99999 F736105
Fendt FENDT 724 S4 743/00101-99999
Fendt FENDT 724 SCR 737/00101-99999 F737000
Fendt FENDT 724NA S4 743/00101-99999
Fendt FENDT 724NA SCR 737/00101-99999 F737105
Fendt FENDT 815 715/00101-99999 -F715000
Fendt FENDT 815NA 715/00101-99999 F715105

Fendt FENDT 817 717/00101 -99999 F717000
Fendt FENDT 817NA 717/00101 -99999 F717105
Fendt FENDT 818 718/00101 -99999 F718000
Fendt FENDT 818 729/00101 -99999 F729000
Fendt FENDT 818NA 718/00101 -99999 F718105
Fendt FENDT 818NA 729/00101 -99999 F729105
Fendt FENDT 819 VARIO SCR 832/00101 -99999 F832000
Fendt FENDT 819NA VARIO SCR 832/00101 -99999 F832105
Fendt FENDT 820 731 /00101 -99999 F731000
Fendt FENDT 820GREENTEC 731/00101-99999 F731004
Fendt FENDT 820NA 731 /00101 -99999 F731105
Fendt FENDT 822 VARIO S4 839/00101 -99999 - F833000
Fendt FENDT 822 VARIO SCR 833/00101 -99999
Fendt FENDT 822NA VARIO S4 839/00101 -99999
Fendt FENDT 822NA VARIO SCR 833/00101 -99999 - F833105
Fendt FENDT 824 VARIO S4 840/00101 -99999
Fendt FENDT 824 VARIO SCR 834/00101 -99999 - F834000
Fendt FENDT 824NA VARIO S4 840/00101 -99999
Fendt FENDT 824NA VARIO SCR 834/00101 -99999 - F834105
Fendt FENDT 826 VARIO S4 841/00101 -99999 - F835000
Fendt FENDT 826 VARIO SCR 835/00101 -99999
Fendt FENDT 826NA VARIO S4 841/00101 -99999
Fendt FENDT 826NA VARIO SCR 835/00101 -99999 - F835105
Fendt FENDT 828 VARIO S4 842/00101 -99999 - F836000
Fendt FENDT 828 VARIO SCR 836/00101 -99999
Fendt FENDT 828NA VARIO S4 842/00101 -99999
Fendt FENDT 828NA VARIO SCR 836/00101 -99999 - F836105
Fendt FENDT 916 916/06001 -99999 - F916002
Fendt FENDT 918NA 916/06001 -99999 - F916107
Fendt FENDT 920 920/06001-99999 - F920002
Fendt FENDT 920NA 920/06001-99999 - F920107
Fendt FENDT 922 919/00101 -99999 - F919000

FENDT 922NA 919/00101 -99999 - F919105

FENDT 924 922/00101 -99999 - F922000

FENDT 924 924/06001 -99999 - F924002

FENDT 924 SCR 941/00101-99999

FENDT 924 TIER III 941/01001-99999

FENDT 924NA 922/00101-99999

FENDT 924NA 924/06001-99999

FENDT 924NA SCR 941/00101-99999

FENDT 926 926/06001-99999 & 00701-00800

FENDT 926NA 926/06001-99999

FENDT 927 925/00101-99999

FENDT 927 S4 950/00101-99999

FENDT 927 SCR 942/00101-99999

FENDT 927 TIER III 942/01001-99999

FENDT 927NA 925/00101-99999

FENDT 927NA S4 950/00101-99999

FENDT 927NA SCR 942/00101-99999

FENDT 930 928/00101-99999

FENDT 930 930/00101-99999

FENDT 930 S4 951/00101-99999

FENDT 930 SCR 943/00101-99999

FENDT 930 TIER III 943/01001-99999

FENDT 930NA 928/00101-99999

FENDT 930NA 930/00101-99999

FENDT 930NA S4 951/00101-99999

FENDT 930NA SCR 943/00101-99999

FENDT 933 931/00101-99999

FENDT 933 S4 952/00101-99999

FENDT 933 SCR 944/00101-99999

FENDT 933 TIER III 944/01001-99999

FENDT 933NA 931/00101-99999

FENDT 933NA S4 952/00101-99999

FENDT 933NA SCR 944/00101-99999
FENDT 936 934/00101-99999
FENDT 936 S4 953/00101-99999
FENDT 936 SCR 945/00101-99999
FENDT 936 TIER III 945/01001-99999
FENDT 936NA 934/00101-99999
FENDT 936NA S4 953/00101-99999
FENDT 936NA SCR 945/00101-99999
FENDT 939 S4 354/00101-99999
FENDT 939 SCR 946/00101-99999
FENDT 939NA S4 954/00101-99999
FENDT 939NA SCR 946/00101-99999
GT 231GT 231/00001-20000
GT 231GTW 231/20001-99999
GT 345GT 345/00001-07000 & 90001-99999
GT 350GT 345/07001-90000
GT 360GT 360/00001-99999
GT 365GT 365/00001-99999
GT 370GT 148/00100-99999
GT 370GT 370/00101-99999
GT 380GT 149/00100-99999
GT 380GT 380/00001-99999
GT 390GT 390/00101-99999
GT 395GT 395/00101-99999
OEM HORSCH 901/01001-99999
XYLON 520 520/00101-99999
XYLON 522 522/00101-99999
XYLON 524 524/00101-99999

FENDT TECHNICAL PUBLICATION CATALOG

<https://epcdepo.com>